



TO REPLACE INK ROLLER

《UNLOADING》

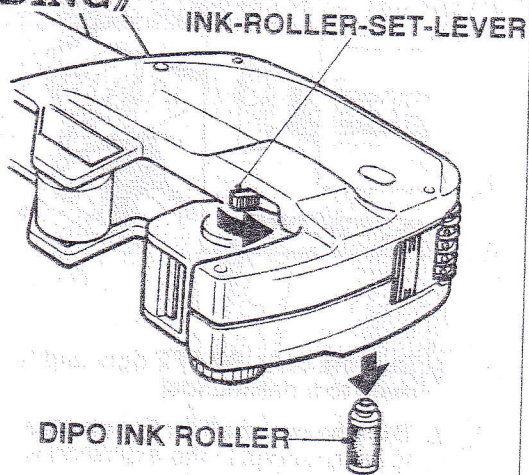

Turn the right side of the body downward and push the **INK-ROLLER-SET-LEVER** to the arrow direction for the **DIPO INK ROLLER** to slip out of the hole.

《LOADING》

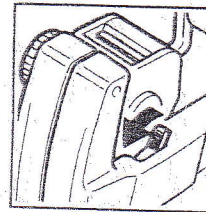

Turn the right side of the body upward and with the **INK-ROLLER-SET-LEVER** pushed, insert a new **DIPO INK ROLLER** to the inside pin.

